

Art.Nr.	EAN	Volt	mAh	Bezeichnung	Marke	passend für	Ladegerät 592
600	4023999006002	3,7	1000	NB - 1 LH	Canon	Ixus 300/330/400/430/500/V/V2/V3/7/ Powershot 100/110/200/230/300/330/400/410/500	
627	4023999006279	7,4	730	NB - 2 LH	Canon	Powershot G7/S30/40/45/50/60/70/80/350D/400D/ MV5i /MV6i/ MV800/830i/MVX20i/25i/30i/35i/40/45i/300i/330i/350i/850i/880X/900/930/950/960	
602	4023999006026	3,7	800	NB - 3 L	Canon	Ixus 700 / 750 / i / i5 / II / Iis / Powershot SD10 / SD 20 / 100 / 110	
603	4023999006033	3,7	750	NB - 4 L	Canon	Ixus 30 / 40 / 50 / 55 / 60 / 65 / 70 / Powershot SD 200 / 300 / i-Zoom / Wireless / i7	
643	4023999006439	3,7	900	NB - 5 L	Canon	Ixus 800is / 850is / 900Ti / SD 700is / 950is	
604	4023999006040	7,4	1400	BP - 511	Canon	EOS 5 D / 10 D / 20 D / 300 D / D 30 / D 60 / Powershot G1/ G2 / G3 / G5 / G6 / Pro 1/ Pro 90	
611	4023999006118	3,7	750	NP - 20	Casio	EX-M1 / M2 / M20 / S1 / S2 / S3 / S20 / S100 / S500 / S600 / S770 / EX75 / Z3 / Z5 / Z6 / Z65 / Z70 / Z75 / Z77 / EX-S1PM	
607	4023999006071	3,7	1000	NP - 30	Casio	QV-R3 / QV-R4	
628	4023999006286	3,7	1300	NP - 40	Casio	EX-P 500 / 505 / 600 / 700 / EX-Z 30 / 40 / 50 / 55 / 57 / 600 / 700 / 750 / 850 / 1000 / 1050 / 1200 / 7500 / V10	
658	4023999006583	3,7	700	NP - 50	Casio	EX-V7	
640	4023999006408	3,7	780	BP - 780S	Contax	SL-300RT	
620	4023999006200	3,7	1500	BP - 1500S	Contax	TVs	
605	4023999006057	3,7	650	NP - 30	Fuji	Finepix F 440 / 450	
606	4023999006064	3,7	650	NP - 40	Fuji	Finepix F 45 / 402 / 455 / 460 / 470 / 610 / 650 / 700 / 710 / 720 / 810 / V10 / Z1 / Z5fd	
607	4023999006071	3,7	1000	NP - 60	Fuji	Finepix F 401 / 601 / 410 / M 603 / M 50i	
650	4023999006507	3,7	1200	NP - 70	Fuji	Finepix F 20 / 40 fd	
651	4023999006514	3,7	1800	NP - 95	Fuji	Finepix F30 / F31 fd	
620	4023999006200	3,7	1500	NP - 120	Fuji	Finepix F 10 / F 11 / 603	
607	4023999006071	3,7	1000	LP - 37	Jenoptik	JD 3.3 x4ie / JD 5.2 z3 MPEG4 / JD 6.0 z3 MPEG4	
606	4023999006064	3,7	650	NP - 40	Jenoptik	JD 5.3 z3 / 7.3 z3	
663	4023999006637	3,7	600	NP - 900	Jenoptik	JD 7.0 z3s	
637	4023999006378	7,2	1800	BN - VF 714	JVC	GR / GR-D / DF / MG / X / GZ-D / GZ-DF	
664	4023999006644	7,4	750	BN - VF 808	JVC	GZ-HD7 / GZ-MG 130 / 131 / 135 / 140 / 155 / 255 / 275 / 575 / GR-D 725 / 760 / 770	
633	4023999006330	3,7	650	NP - 1	Konica-Minolta	Dimage X1	
608	4023999006088	3,7	650	NP - 200	Konica-Minolta	Dimage X / Xi / XT / XG	
609	4023999006095	7,4	1500	NP - 400	Konica-Minolta	Dimage A1 / A 2 / 7 D / 5D	
610	4023999006101	3,7	750	NP - 500/600	Konica-Minolta	Dimage G 400 / 500 / 530 / 600 / 630 / Revio KD310 / 400 / 410 / 420 / 420Z / 500 / 510	
612	4023999006125	3,7	700	NP - 700	Konica-Minolta	X 50. X 60	
613	4023999006132	7,2	680	NP - 800	Konica-Minolta	A200	
663	4023999006637	3,7	600	NP - 900	Konica-Minolta	Dimage E40 / E50	
640	4023999006408	3,7	780	BP - 780S	Kyocera / Yashica	SL-300R / SL-400R	
641	4023999006415	3,7	800	BP - 800S	Kyocera / Yashica	S-3 / S-3x / S-4 / S-5R / S-30 / S-40 / S-3300	
663	4023999006637	3,7	600	NP - 900	Kyocera / Yashica	EZ 4033	
607	4023999006071	3,7	1000	NP - 60	Maginon	DC-X / 5300 / 5350 / 5390 / 6300 / 8300 / 8600	
663	4023999006637	3,7	600	NP - 900	Maginon	DC-6600 / 6800 / Performic S5 / Slimline X4 / X5 / X6 / X50 / X60 / XS6	
607	4023999006071	3,7	1000	NP - 60	Minox	DC-5211 / 6311 / 8111	
663	4023999006637	3,7	600	NP - 900	Minox	DC-4211 / 5222	
613	4023999006132	7,2	680	EN - EL 1	Nikon	Coolpix 775 / 880 / 885 / 990 / 995 / 4300 / 4500 / 4800 / 5000 / 5400 / 5700 / 8700	
614	4023999006149	3,7	1000	EN - EL 2	Nikon	Coolpix 2500 / 3500 / SQ	
615	4023999006156	7,4	1500	EN - EL 3	Nikon	D 50 / D 70 / D 100	
653	4023999006538	7,4	1500	EN - EL 3e	Nikon	D 50 / D 70 / D 70s / D 80 / D 100 / D 200 / D 300	
616	4023999006163	3,7	1100	EN - EL 5	Nikon	Coolpix 3700 / 4200 / 5200 / 5900 / 7900 / P3 / P4 / P5000 / S10	
639	4023999006392	7,4	1100	EN - EL 7	Nikon	Coolpix 8400 / 8800	
629	4023999006293	3,7	850	EN - EL 8	Nikon	Coolpix S1 / S2 / S3 / S5 / S6 / S7C / S9 / P1 / P2	
657	4023999006576	7,4	1000	EN - EL 9	Nikon	D 40 / D 40x	
632	4023999006323	3,7	800	EN - EL 10	Nikon	S 200 / S 500	
626	4023999006262	7,4	1400	BLM - 1	Olympus	C-5050 / Wide / C-5060 / C-8080 / C-7070 / E-1 / E-300 / E 330 / E-500 / E-510	
660	4023999006606	7,4	1150	BLS - 1	Olympus	E-400 / E-410	
617	4023999006170	3,7	1090	LI - 10B/12B	Olympus	Camedia C50 / 70 / 470 / 675 / 760UZ / 765 ultra / 770UZ / 5000 / 7000 / Mju 300 / 400 / 410 / 600 / 810 / 1000 / FE-200	
607	4023999006071	3,7	1000	LI - 20B	Olympus	AZ-1 / AZ-2 / AZ-2 Zoom / Ferrari Digital 2004	
632	4023999006323	3,7	800	LI - 40B/42B	Olympus	IR-300/FE-5500/SP-700/FE-150/160/190/230/240/250/280/290/300/Mju Digital700/720SW/725SW/740/750/760/770SW/780x-790/790SW/820/830/1200	
618	4023999006187	7,2	650	CGA - S 002	Panasonic	Lumix FZ 1 / 2 / 3 / 4 / 5 / 10 / 15 / 20	
619	4023999006194	3,7	750	CGA - S 004	Panasonic	Lumix FX 2 / 7	
630	4023999006309	3,7	1150	CGA - S 005	Panasonic	DMC FX 01 / FX 07 / FX 3 / FX 8 / FX 9 / FX 10 / FX 12 / FX 50 / FX 100 / LX 1 / LX 2	
634	4023999006347	7,2	900	CGA - S 006	Panasonic	Lumix FZ 7 / FZ 8 / FZ 30 / FZ 50	
644	4023999006446	3,7	1000	CGA - S 007	Panasonic	DMC-TZ 1 / TZ 2 / TZ 3	
659	4023999006590	3,7	650	CGA - S008 / BCE 10	Panasonic	DMC-FX 30	
607	4023999006071	3,7	1000	CGA - S 301	Panasonic	SV-AV10 / SV-AV25 / SV-AV30 / SV-AV35 / SV-AV100 / SV-AS30 / SV-AS3A / SV-PT1	
649	4023999006491	7,2	760	CGA - S 303	Panasonic	SDR-S 100 / S 150 / S 300	
635	4023999006354	7,2	1400	CGA - DU 14	Panasonic	VDR-M 50 / 70 / GS-10 / 17 / 21 / 22 / 27 / 30 / 35 / 37 / 50 / 55 / 70 / 75 / 120 / 140 / 150 / 180 / 200 / 250 / 280 / 300 / 400 / 500 / D100	Adapter 592-L1
636	4023999006361	7,2	2020	CGA - DU 21	Panasonic	VDR-M 50 / 70 / GS-10 / 17 / 21 / 22 / 27 / 30 / 35 / 37 / 50 / 55 / 70 / 75 / 120 / 140 / 150 / 180 / 200 / 250 / 280 / 300 / 400 / 500 / D100	Adapter 592-L1

NEU

Art.Nr.	EAN	Volt	mAH	Bezeichnung	Marke	passend für	Ladegerät 592
607	4023999006071	3,7	1000	D - Li 2	Pentax	Optio 430 / 430RS / 330 / 330RS	
620	4023999006200	3,7	1500	D - Li 7	Pentax	Optio MX / MX4 / 450 / 550 / 555 / 750 Z	
606	4023999006064	3,7	650	D - Li 8	Pentax	Optio A20 / L20 / S / SV / Svi / S4 / S4i / S5i / S5n / S6 / S7 / WPi / WP8X / Optio X / A10 / A30 / T10 / T20 / W10 / W20	
609	4023999006095	7,4	1500	D - Li 50	Pentax	K 10D	
632	4023999006323	3,7	800	D - Li 63	Pentax	Optio M30 / M40 / T30 / W30	
606	4023999006064	3,7	650	NP-40 / LB-5030	Praktica	Luxmedia 6105 / 6403 / 6503 / 7203 / 7303 / 7403 / 8303	
607	4023999006071	3,7	1000	NP - 60	Praktica	DC 52 / DVC 6.1	
610	4023999006101	3,7	750	LB 4	Praktica	Exakta DC 4200	
663	4023999006637	3,7	600	BYD / NP - 900	Praktica	Luxmedia 7103 / 8203 / 10-XS	
607	4023999006071	3,7	1000	DB - 40	Ricoh	Caplio 300G / 400G wide / G3 / G4 / G4 wide / RR10 / RR30 / RR300	
620	4023999006200	3,7	1500	DB - 43	Ricoh	Caplio G3 / G4 / G4wide / 300G / 400Gwide / 500 G wide / RR10 / RR30 / RX / GX8	
630	4023999006309	3,7	1150	DB - 60	Ricoh	Caplio R3 / R4 / R5 / R30 / R40 / GR / GX 100	
659	4023999006590	3,7	650	DB - 70	Ricoh	Caplio R6	
607	4023999006071	3,7	1000	NP - 60	Rollei	DK3000 / DSX 410 / DT3200 / DT4200 / Prego DP5300 / DP6000 / DP6300 / DP8330	
606	4023999006064	3,7	650	NP - 40	Rollei	DA 10 / DB 60 / DP 60 / DX 63 / DX 68 / Tribute DT 6	
610	4023999006101	3,7	750	NP - 500/600	Rollei	Prego DP 4100	
620	4023999006200	3,7	1500	DR-5100	Rollei	Prego DR 5100	
663	4023999006637	3,7	600	NP - 900	Rollei	DS 6 / Prego DP4200 / 5200 / 5700 / 6200	
606	4023999006064	3,7	650	SLB-0737	Samsung	Digimax i 5 / i 50	
646	4023999006460	3,7	850	SLB-0837	Samsung	Digimax i 6 / i 70 / L 50 / L 60 / L 73 / L 700 / NV 3 / NV-7	
655	4023999006552	3,7	600	SLB-0837B	Samsung	NV-10 / L 70	
607	4023999006071	3,7	1000	SLB-1037/1137	Samsung	Digimax CA 5 / CA 505 / V 700 / V 800	
662	4023999006620	3,7	650	SLB-1137C	Samsung	Digimax i7	
661	4023999006613	3,7	650	SLB-1137D	Samsung	NV-11 / L 74 wide / L 77	
647	4023999006477	3,7	1280	SLB-1237	Samsung	Digimax L 55 W / L 85	
609	4023999006095	7,4	1500	SLB-1674	Samsung	GX 10	
648	4023999006484	7,2	1600	SLB-1974	Samsung	Digimax Pro 815	
617	4023999006170	3,7	1090	DB-L10	Sanyo	VPC-J1 / J2 / AZ3 / MZ3	
654	4023999006545	3,7	600	DB-L20	Sanyo	VPC-C1 / C4 / C5 / CA6 / CG 65 EX / E6 / E7 / J4	
612	4023999006125	3,7	700	DB-L30	Sanyo	VPC-A5	
656	4023999006569	3,7	600	DB-L40	Sanyo	VPC-HD1 / HD1A / HD2	
631	4023999006316	3,7	680	NP - FE 1	Sony	DSC- T 7	
642	4023999006422	7,2	680	NP - FP 50/30	Sony	DCR-DVD 92/105/202/203/205/304/403/404/405/505/ DCR-HC 17/22/23/24/32/35/39/42/44/46/94/96/HDR-HC3/SR30/50/70/90/100	Adapter 592-L2
621	4023999006217	3,7	1230	NP - FR 1	Sony	DSC- F88 / P100 / P120 / P150 / P200 / V3 / T30 / T50 / G1	
638	4023999006385	3,7	680	NP - FT 1	Sony	DSC- M1 / M2 / T1 / T3 / T5 / T9 / T10 / T11 / T33 / L1	
622	4023999006224	7,2	1400	NP - FM 50	Sony	Cybershot F 707 / 717 / 828 / R1/ S75 / S85 / CD200 / 300 / 400 / 500 / HDR-HC1 / DCR-TRV 238 / 270 / 480	
652	4023999006521	7,4	1400	NP - FM 55H	Sony	Alpha 100	
623	4023999006231	7,2	1400	NP - F 330/550	Sony	CCD TR / TRV / TR7 / MVC FD Serien	
645	4023999006453	7,2	2000	NP - F 570	Sony	HDR- FX1 / DCR- VX 2100	Adapter 592-L3
624	4023999006248	7,2	2800	NP - F 750	Sony	CCD SC 5 / TR 3	Adapter 592-L3
625	4023999006255	7,2	5600	NP - F 960	Sony	CCD TR 3 / SC 5 / VX 1000E / 2100	Adapter 592-L3
607	4023999006071	3,7	1000	NP - 60	Voigtländer	Digital D530 / Digital D630	
663	4023999006637	3,7	600	NP - 900	Voigtländer	Virtus D4 / D5 / D6 / D600 / S6	

aktuelle Akkuliste und Informationen im Internet unter www.bilora.de